
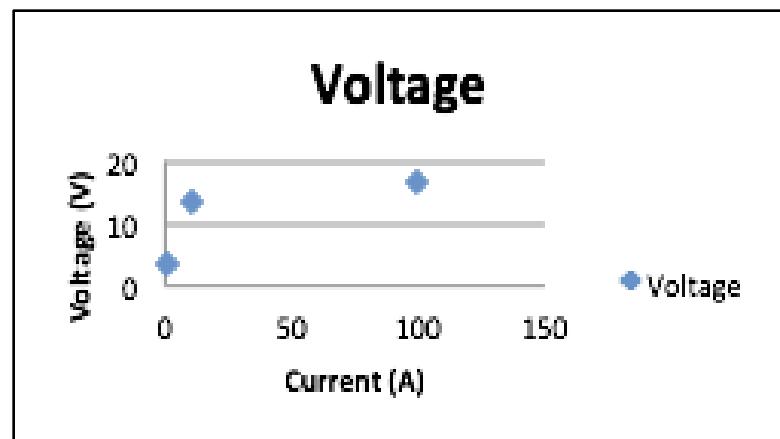



Block Diagram of the AC power for one cryostat

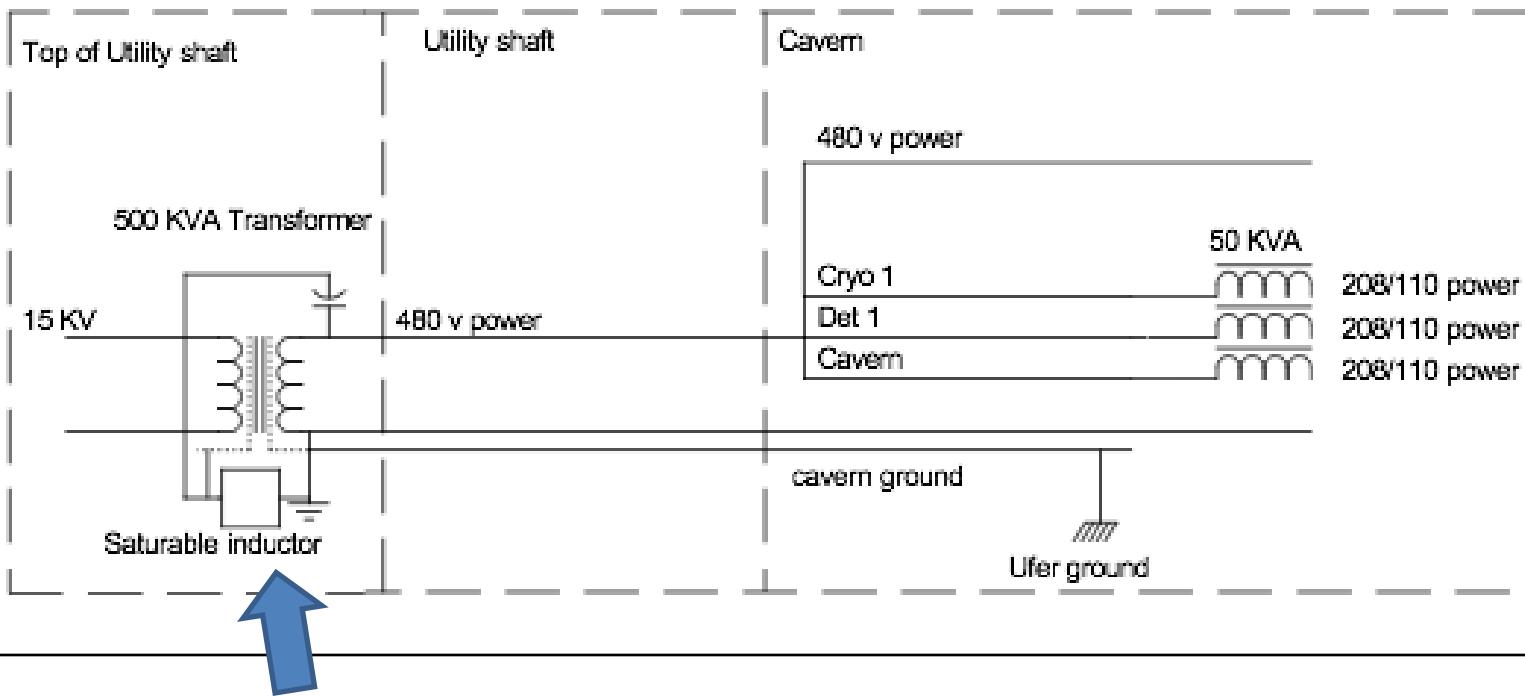

Saturable inductor used for ground isolation

Voltage developed across the inductor as a function of the fault current